


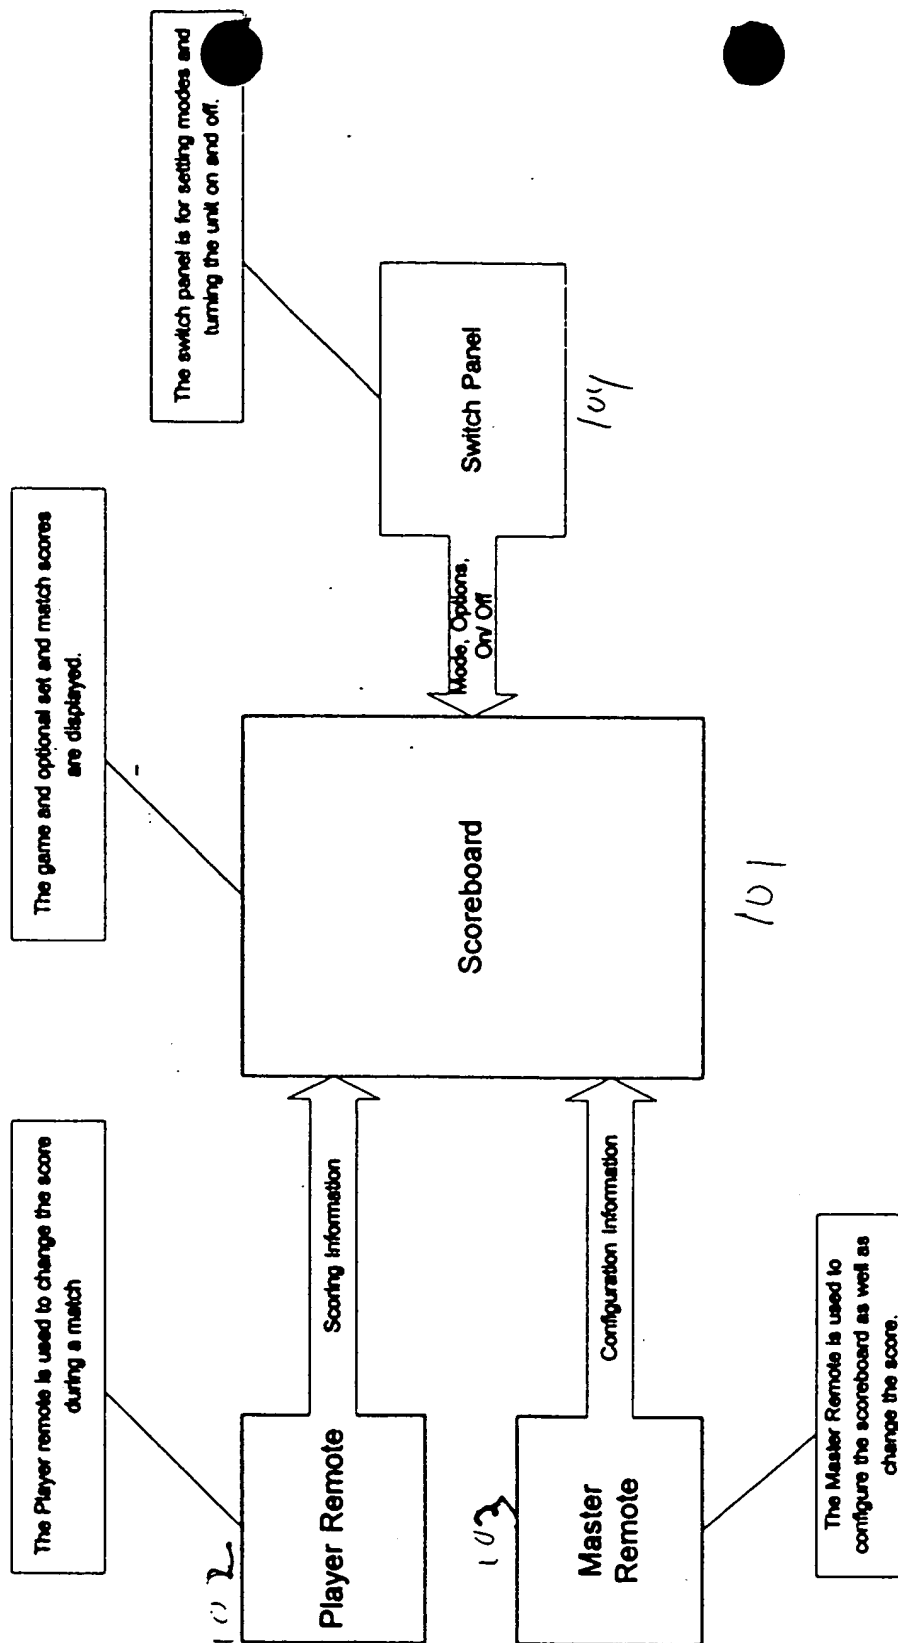 
[illegible]

Fig. 1a


Scoreboard, Remotes, and Switch Panel				
DRAWN	PHILW			
ISSUED	SCALE	N/A	SHEET	2 OF 9
	SIZE	PBCH NO	DWG NO	REV A

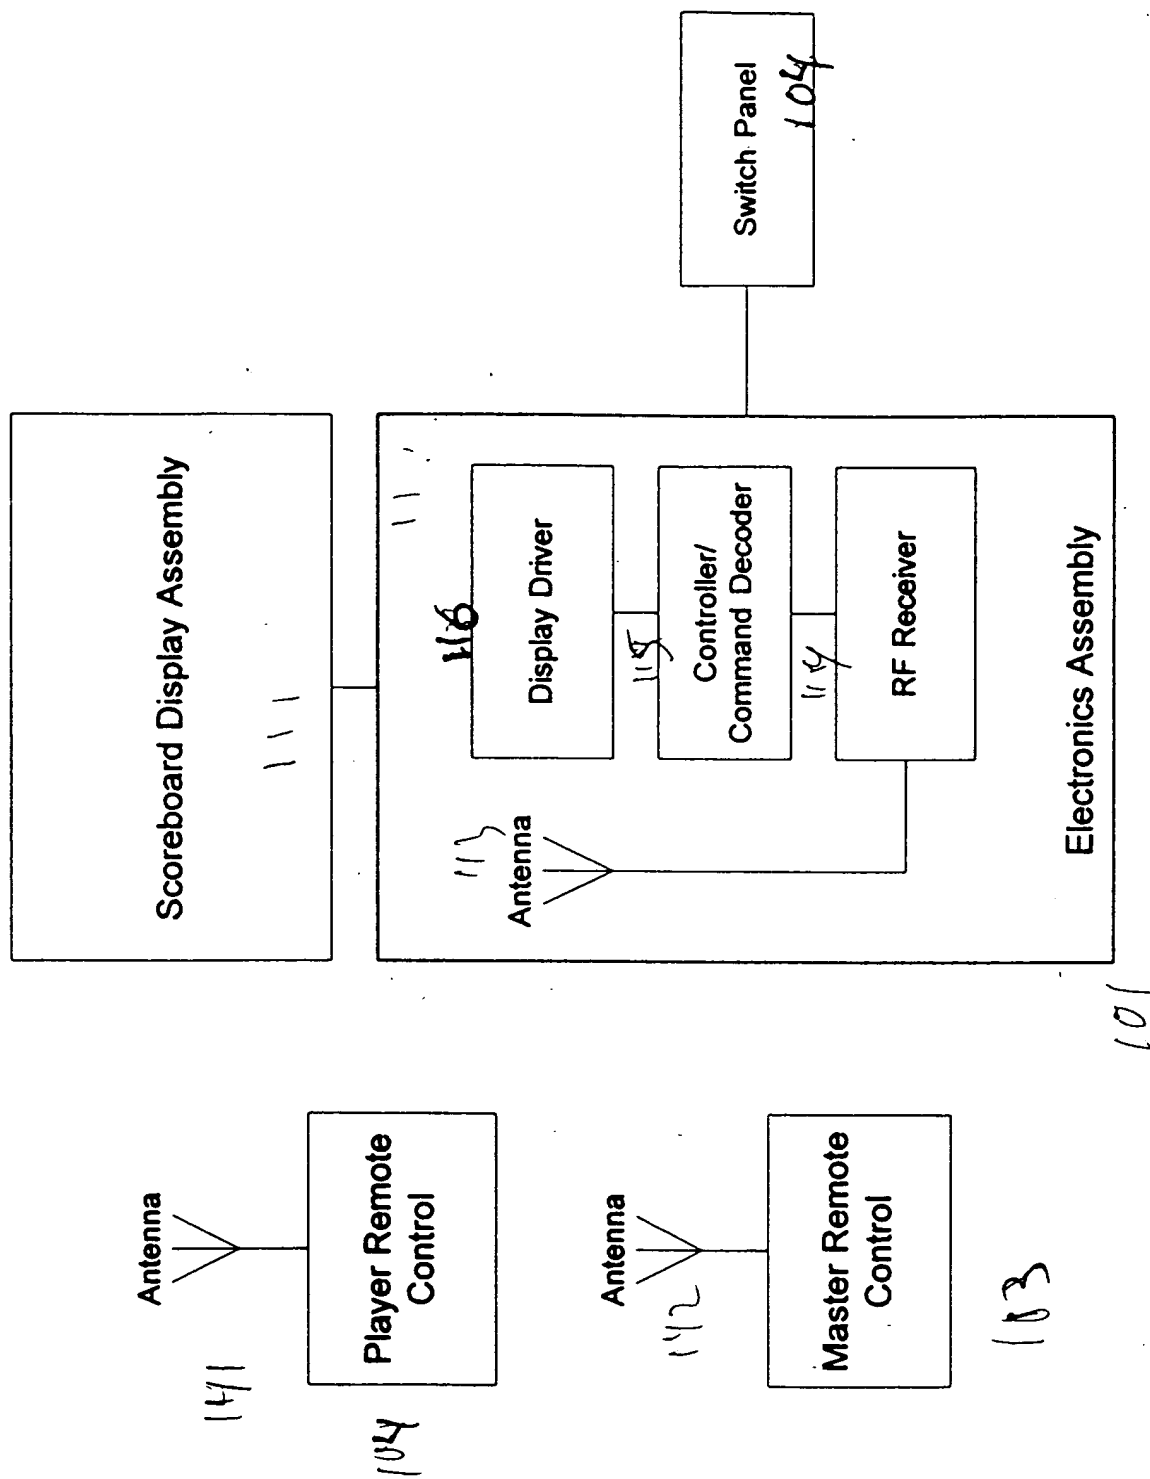 

91617

Scoreboard System Components		REV A	
DRAWN	PHILW	DWG NO	
ISSUED		PSCH NO	
		SCALE	N/A
		SHEET	3 OF 9

 200

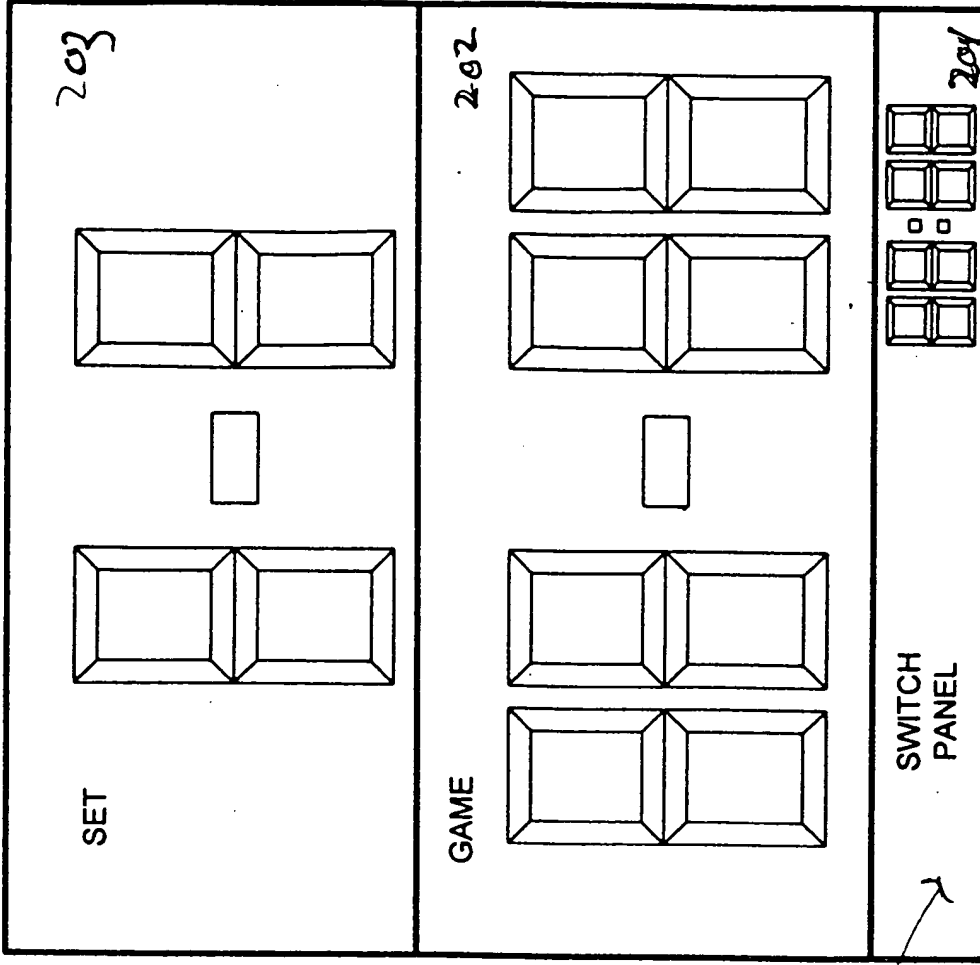

SWITCH PANEL DETAIL		
SWITCH	POSITIONS	
Match Mode	3	5
Set Mode	6	8
Tie Breaker Mode	ON	OFF
Timer	ON	OFF
Power	ON	OFF


204

Fig 2a

Tournament Scoreboard Display Assembly		SIZE	FSCM NO	DWG NO	REV
DRAWN	PHILW				A
ISSUED		SCALE	N/A	SHEET	5 OF 9

00447 3003750

 210

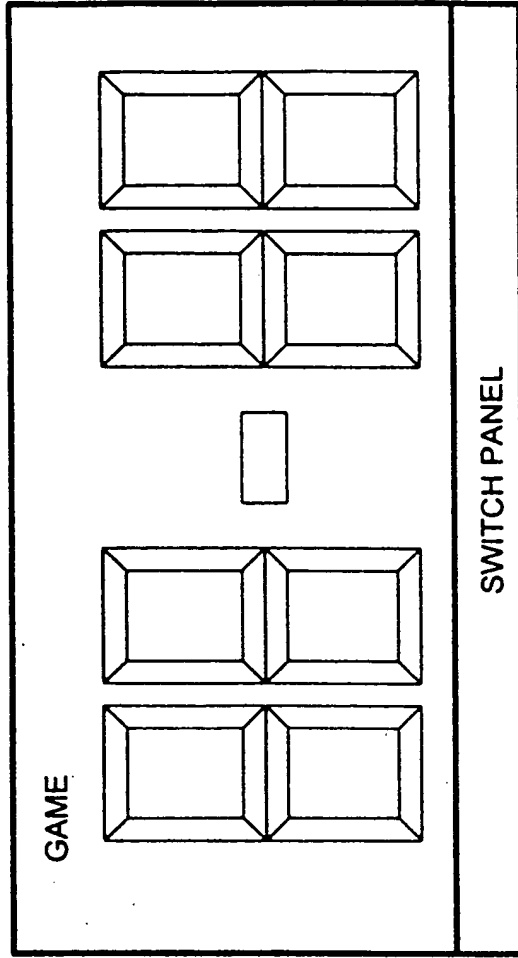

SWITCH PANEL DETAIL		
SWITCH	POSITIONS	
Power	ON	OFF


212

211

Personal Scoreboard Display Assembly		
DRAWN	PHILW	
ISSUED		

SIZE	FSCM NO	DWG NO	REV
			A
SCALE	N/A	SHEET	6 OF 9

 2/2/21
F022b

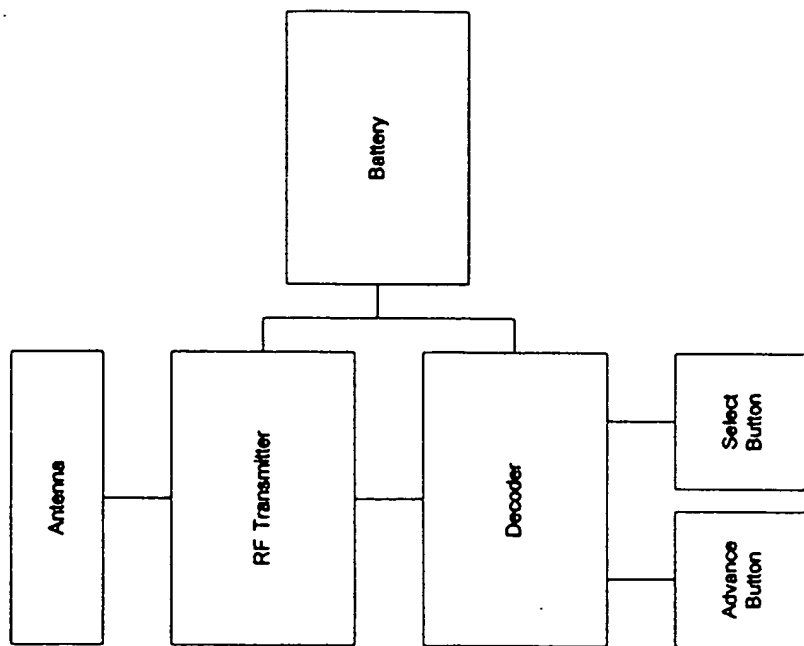


Button	How the button is used
Select	Select a Scoreboard element to change
Advance	Increment the selected scoreboard element

20

Player Remote Control		SIZE		FSCM NO	DMG NO	REV A
DRAWN	PHILW					
ISSUED		SCALE	N/A		SHEET	7 OF 9

[illegible]

BUTTON	HOW THE BUTTON IS USED
Select	Select a scoreboard element to change
Advance	Increment the selected element
Configure	Select a configuration element to change

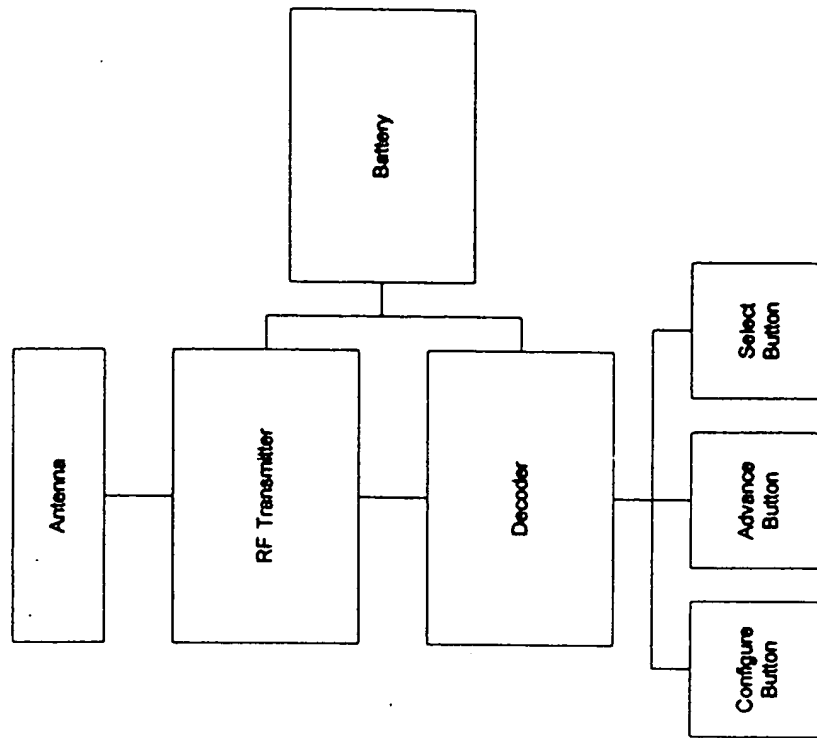 

Master Remote Control		SIZE	FSOM NO	DWG NO	REV
DRAWN	PHILW				A
ISSUED		SCALE	N/A	SHEET	R OF Q

95-10-7



Electronics Assembly

PHILW

DRAWN

SCALEW/A

SWEET

1

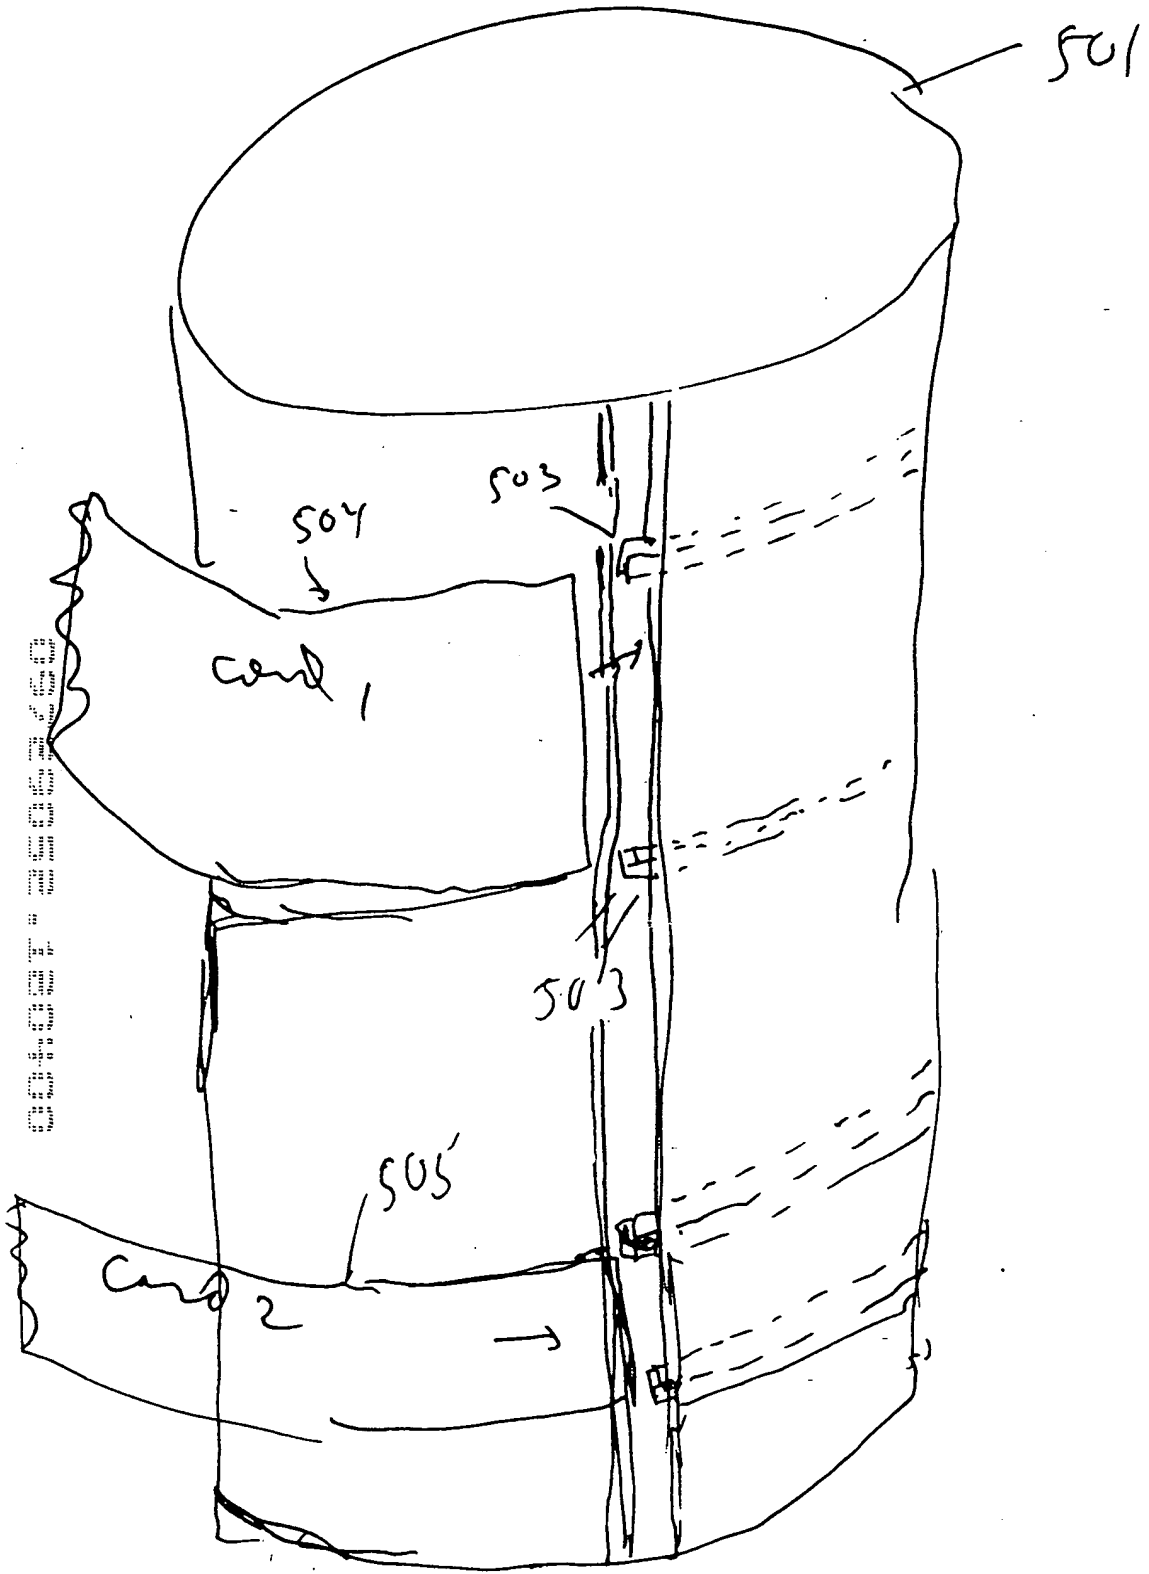 


Fig 5a

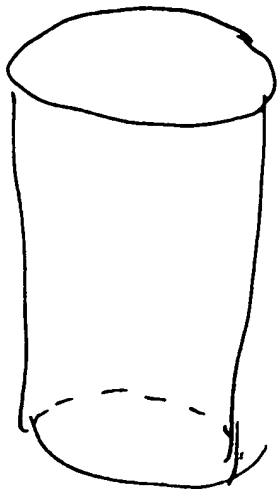 


Fig 6a



Fig 6b

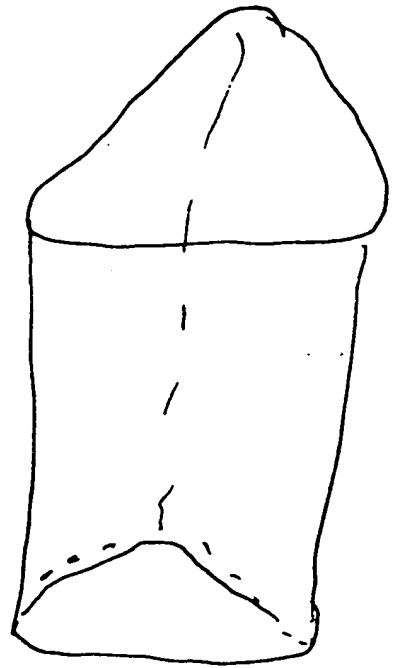 


Fig 6c



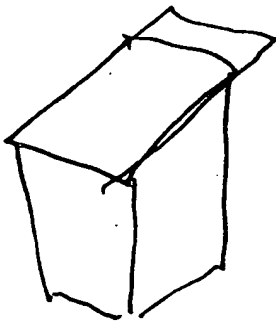 



Fig. 6d

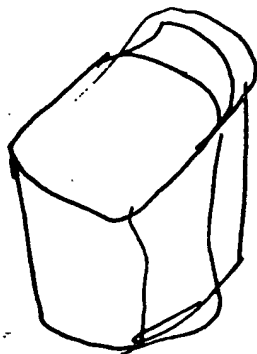 

6e

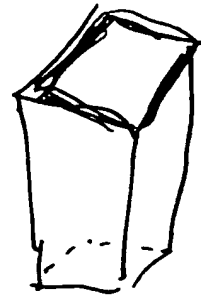 

6f

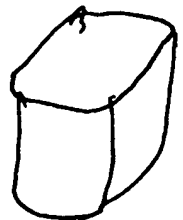 

6g